

NL NEDERLANDS



ATRIUM Snelstartgids voor webserver V3.0

De keuze van de installateur cdvibenelux.com

Doel:

Deze beknopte en eenvoudige gids zal u begeleiden tijdens de opstart van het Atrium toegangscontrolesysteem door gebruik te maken van voorgedefinieerde parameters.

Eens u deze gids succesvol hebt afgerond :

- zullen alle deuren beveiligd zijn (vergrendeld)
- zullen enkel kaarten die aan het systeem toegevoegd zijn de deur gedurende 5 seconden ontgrendelen.

Opmerking: De Atrium in standalone configuratie werkt met 1 lezer per deur

Zie de Atrium handleiding voor gevorderde programmering.

Opmerking : Zorg ervoor dat alle systeemcomponenten en bekabeling correct aangesloten zijn volgens de gebruiks-aanwijzing. Zie de Atrium AC22 2-deurscontroller en de Atrium AX22 2-deurs uitbreidingskaart handleidingen en bekabelingsschema's voor verdere assistentie.

Stap 1 : Start het 'Atrium Finder' programma

Zorg ervoor dat uw computer en de Atrium AC22 deurcontroller verbonden zijn.

Volg deze instructies hieronder om toegang te verschaffen tot de Atrium Web Server :

- a) Dubbelklik op het icoon van de 'Atrium Finder' (gratis beschikbaar op het downloadgedeelte van www.cdvibenelux.com na registratie)
- b) Het 'Atrium Finder' venster verschijnt en toont de Atrium controller.
- c) Dubbelklik op de controller in de lijst of selecteer de controller en klik op "Ga naar de webpagina".

🗠 Atrium Finder 💼 📼 📼									
Refresh Modify Go To Web Page									
Serial Number	Display Name	Product Code	IP Address	Port	MAC Address	Uses DHCP			
0-00-03-09	CDVI Group	A-C22	192.168.0.14	10000	00:07:1B:02:01:10				



Stap 2: systeem webpagina login

• Gebruik de standaard login ID en het paswoord die hieronder aangeduid zijn:

Voor VOLLEDIGE toegang, gebruikt u de INSTALLATEUR login: Login ID: admin Paswoord: admin **Voor BEPERKTE toegang gebruikt u de MASTER login:** Login ID: master Paswoord: master

Opmerking: De gebruikersnaam en het paswoord zijn hoofdlettergevoelig.

BELANGRIJK : VERANDER UW GEBRUIKERSNAAM EN WACHTWOORD BIJ DE EERSTE AANMELDING OMWILLE VAN VEILIGHEIDS-REDENEN. DIT WORDT GEDAAN IN HET MENU "GEBRUIKER".

LOGIN PAGINA VAN DE ATRIUM WEBSERVER

ATRIUM	CDVI Group Demo
	Login
	Login ID Password Forgot your password ?
	Enter
	() CDVI Group

4

Snelstartgids voor webserver V3.0

Stap 3: Stel datum en tijd in:

- Klik op *Hardware* in het menu, selecteer *Controlepaneel* en vervolgens het tabblad *Datum en tijd*.
- Klik op "Wijzigen" en kies de tijdszone.
- Stel het zomer- en winteruur in voor uw regio in (indien er een is).
- Klik op "**Opslaan**" om te bevestigen.

ATE										
Users	Doors	Areas	Configuration	Cameras	All Events	Hardware				
Control Panel						Control Panel				
Product	Date and Time	Update Ev	ents SSL							
Edit	ave Cancel									
Date and Time S	etting									
Browser Time	2014-09-	11 - 14:17								
Module Time	2014-09-	11 - 14:17								
Time Zone	(GMT -	5:00) Eastern Time (US	& Canada), Bogota, Lima	V						
Daylight Saving	Time		Dav. Manth							
Start on the F	First Sunday	▼ Folow	ing 07 03	02 : 00						
Ends on the F	First Sunday	• Folow	Ing 01 Month	02 : 00						
Offset (HH:M	M) 01 :	00								

5

Stap 4: Kaartprogrammatie

- a. Presenteer de meegeleverde MASTER kaart aan de lezer.
- b. De deur zal ontgrendelen.
- c. Binnen de 5 seconden, dient u de meegeleverde PROGRAMMING kaart aan de lezer te presenteren.
 - CDVI-lezer LEDs zullen opeenvolgend knipperen (2 rode + 2 groene).
- d. De kaartprogrammatiemode is actief.
- e. Presenteer, één voor één, de nieuwe toegangskaarten aan de lezer om ze aan het systeem toe te voegen.
- f. Elke nieuwe kaart zal een gebruiker creëren en de kaart aan de gebruiker toekennen.
- g. De groene LED zal knipperen nadat elke kaart werd gelezen en een korte bieptoon zal door de lezer worden uitgestuurd.
- h. Presenteer de PROGRAMMING kaart opnieuw om de kaartprogrammatie-mode stop te zetten.
- **Belangrijk** : Gebruik de webpagina na het programmeren van nieuwe kaarten om gebruikers/kaarten of kaart/pinregistratie te wijzigen. Standaard zijn de deuren altijd vergrendeld en wordt de toegang enkel verleend door een geldige kaart.

Het systeem is nu klaar voor gebruik

Na een succesvolle login, zullen de webpagina's van ATRIUM u in staat stellen om:

• GEBRUIKERS/KAARTEN TE BEHEREN

ATR	IUN	CDVI	Group					USER	INSTAL
Users	Doors	Areas	Configuration	Cameras	All Events	s Hardv	vare		
+.				٩	User Cards	Access Levels	Events	Location	
Last Name		First Name		State	Refresh	int			
Doe		John		¥					
INSTALLER		USER		*	Date & Time	Description			
MASTER		USER		¥	2014-09-11 14:16:14	Module [CDVI Gro	up] Programn	ning Changed by User [USER	
PROGRAMMING		USER		× .	2014-09-11 14:15:52	User [USER INSTALL	ER1 has logged	I in using the web interface	
				2014-09-10 15:12:02	Module Deleted by Us	er [USER INST.	ALLER 1		
					2014-09-10 15:10:26	Module Deleted by Us	er [USER INST.	ALLER 1	
					2014-09-10 14:25:55	Firmware Programmin	a Init by User [(JSER INSTALLER 1	
					2014-09-10 14:21:08	User [USER INSTALL	ER] has logged	I in using the Atrium software	
					2014-09-10 14:13:40	Firmware Programmin	g Init by User [(JSER INSTALLER]	
					2014-09-10 14:04:15	User [USER INSTALL	.ER] has logged	I in using the Atrium software	
					2014-09-10 14:00:26	IP Device Programmin	g Changed by U	Iser [USER INSTALLER]	
					2014-09-10 13:59:47	Card [Tag] Programm	ning Changed by	User [USER INSTALLER]	
					2014-09-10 13:59:47	User [John Doe] Prog	gramming Chang	ged by User [USER INSTALLER]	
					2014-09-10 13:59:44	Card [Tag] Programm	ning Changed by	User [USER INSTALLER]	
					2014-09-10 13:57:42	User [USER INSTALL	ER] has logged	I in using the Atrium software	
					2014-09-10 13:57:12	Module [CDVI Gro INSTALLER]	up] Programn	ning Changed by User [USER	
					2014-09-10 13:37:06	User [USER INSTALL	ER] has logged	I in using the Atrium software	
and					2014-09-10 13:35:47	Firmware Programmin	g Init by User [L	JSER INSTALLER]	
genu					2014-09-10 13:34:44	User [USER INSTALL	ER] has logged	I in using the Atrium software	-
Active	X Inactive					М	K F H		





Programming kaart

ATRIUM Snelstartgids voor webserver V3.0

• DEUREN TE VERGRENDELEN/ONTGRENDELEN

Jsers Doors	Areas Config	uration	Cameras	All Events	Hardware
Reset Lock Unlock C	Grant Access All			Legend Door Refresh Prin	Events
Display Name	Camera	State	Lock	Date & Time	Description
10-00-04-0F: Door 01				2014-09-10 08:46:48	Door [00-00-04-0F: Door 01] Programming Changed by User [USER
00-00-04-0F: Door 02				2014-09-09 17:24:52	Door [00-00-04-0F: Door 01] Programming Changed by User [USER
00-00-04-0F: Door 03					INSTALLER]
00-00-04-0F: Door 04					
00-00-04-0F: Door 05		\bigcirc			
00-00-04-0F: Door 06		\bigcirc			
00-00-13-3E: Door 01					
00-00-13-3E: Door 02		$\widetilde{\bigcirc}$			
00-00-13-3E: Door 03		\bigcirc			
00-00-13-3E: Door 04		$\widetilde{\bigcirc}$			
					I ∢
H	4				

• PARTITIES TE BEHEREN

ATF			Group				USER INSTALLER
Users	Doors	Areas	Configuration	Cameras	All Events	Hardware	
		٩			Legend Area f	Events	
Display Name	- D 01				Disarmed		
00-00-04-0F: Area	a Door 01						
00-00-04-0F: Area	a Door 03				Armed		
00-00-04-0F: Area	a Door 04						
Area 05					Alarm		
Area 06							
00-00-13-3E: Area	a Door 01				Normal		
00-00-13-3E: Area	a Door 02						
00-00-13-3E: Area	Door 03				Output		
UU-UU-13-3E, Arto	Door u4	[4 ∢ ▶ ▶]					

• VAKANTIEDAGEN TE BEHEREN

ATRI	UM	CDVI	Group				USER INSTALLER
Users D	Joors Ar	reas	Configuration	Cameras	All Events	Hardware	
Holidays New Year Christmas	of 1	Search holi	Holidays Schedules Access Levels	Q tate	Holidays Edit Save C General Information State Label Configuration Gay the Start Time Duration Occur Yearly On	Cancel Active Inactive of First V Sunday V : : (year)	January V January V

• UURROOSTERS TE BEHEREN

ATF	RUN	CDVI	Group				USER INSTALLER Logout
Users	Doors	Areas	Configuration	Cameras	All Events	Hardware	
Schedule Never Schedule Always Schedule Program Schedule 8H-17H	ming	Search sch	Holidays <u>Schedules</u> Access Levels	Ides : 4	Schedule Periods Edit Save C - General Information State Label Start Date Cycle (day)	Holidays Cancel Active Inactive	

NL

7

• TOEGANGSNIVEAUS TE BEHEREN

	Luquu
Users Doors Areas Configuration Cameras All Events Hardware	
Koress Levels Access Level Avrays Access Level Programming Ceneral Information State Objective Cancel Ceneral Information State Access Level Programming Ceneral Information State Access Level Programming Total access levels : 2 Access Level Programming Ceneral Information State Active Inactive	

• CAMERA'S TE CONFIGUREREN

ATF	RIUN	CDV1	Group				USER INSTALLER Logout
Users	Doors	Areas	Configuration	Cameras	All Events	Hardware	
Display Name Camera 1)	Show	Preview		Camera Edit Save - General Information State Display Name - Live Feed Resolution Video Url	Active Inactive	
Camera 1							

• MODULES TOE TE VOEGEN EN TE CONFIGUREREN

TRIU		iroup				USER INSTALLE
Users Doors	Areas	Configuration	Cameras	All Events	Hardware	
+ •				Connection Settings	Control Panel Sub-Controllers	
Serial Number	IP Address	Status		Edit Save CL		
egend Online Bad Module Connection	192.168.1.46:10000	Connection to an A	C22M	- Connection Settings State Serial Number IP Address Software Port Webpage Port Module Connection Key	Active Inactive 10000133E 192.168.1.46 10000 80	

• SYSTEEMEVENEMENTEN WEER TE GEVEN

ATR	IUM	CDV	'I Group				USER INSTALLER Logout		
Users	Doors	Areas	Configuration	Cameras	All Events	Hardware			
Refresh	rint								
Date & Time	Serial Number	Description							
2014-09-11 14:22:38	0000040f	Camera [Camer	ra 1] Added by User [USER INSTA	LLER]			<u>^</u>		
2014-09-11 14:16:14	0000040f	Module [CDVI 0	Group] Programming Changed by U	ser [USER INSTALLER]					
2014-09-11 14:15:52	0000040f	User [USER IN	STALLER] has logged in using the v	veb interface					
2014-09-10 15:18:00	0000040f	Door [00-00-04-	-0F: Door 05] Trouble Restore(Cont	act)					
2014-09-10 15:18:00	0000040f	Door [00-00-04-	-0F: Door 06] Trouble Restore(Cont	act)					
2014-09-10 15:17:44	0000040f	Module [AC22 [[2-Door Controller]](0000133e) Was	Reconnected					
2014-09-10 15:17:42	0000040f	IP Device Modul	le Online						
2014-09-10 15:17:41	0000133e	Atrium PC serve	Atrium PC server has logged in						
2014-09-10 15:17:32	0000133e	Battery Absent							
2014-09-10 15:17:25	0000040f	Door [00-00-04-	-0F: Door 04] Trouble Restore(Lock)					
2014-09-10 15:17:24	0000040f	Door [00-00-04-	-0F: Door 04] Trouble Restore(Cont	act)					
2014-09-10 15:17:13	0000133e	Module [AX22 [[2-Door Expander]](00001264) Was	Reconnected					
2014-09-10 15:17:11	0000133e	System Cold Sta	art						
2014-09-10 15:17:09	0000040f	Door [00-00-04-	-0F: Door 05] Trouble(Contact)						
2014-09-10 15:17:09	0000040f	Door [00-00-04-	-0F: Door 05] Trouble(Lock)						
2014-09-10 15:17:09	0000040f	Door [00-00-04-	-0F: Door 06] Trouble(Contact)						
2014-09-10 15:17:09	0000040f	Door [00-00-04-	-0F: Door 06] Trouble(Lock)						
2014-09-10 15:17:09	0000040f	Module [AX22 [[2-Door Expander]](00001264) Was	Missing					
2014-09-10 15:17:06	0000040f	Door [00-00-04-	-0F: Door 03] Trouble Restore(Lock)					
2014-09-10 15:17:06	0000040f	Door [00-00-04-	-0F: Door 03] Trouble Restore(Cont	act)					
2014-09-10 15:17:05	0000040f	Module [AX22 [[2-Door Expander]](00000537) Was	Reconnected					
2014-09-10 15:13:31	0000040f	Door [00-00-04-	-0F: Door 06] Programming Change	d by PNP Master					
2014-09-10 15:13:31	0000040f	Area [Area 06]	Programming Changed by PNP Ma	ster					
2014-09-10 15:13:30	0000040f	Door [00-00-04-	-0F: Door 05] Programming Change	d by PNP Master					
2014-09-10 15:13:29	0000040f	Area [Area 05]	Programming Changed by PNP Ma	ster					
2014-09-10 15:13:27	0000040f	Module [AX22 [[2-Door Expander]] (00001264) Was	Detected					
2014-09-10 15:13:16	0000040f	Door [00-00-04-	-0F: Door 03] Trouble(Contact)						
2014-09-10 15:13:16	0000040f	Door [00-00-04-	-0F: Door 04] Trouble(Contact)						
2014-09-10 15:13:16	0000040f	Door [00-00-04-	-0F: Door 03] Trouble(Lock)						
2014-09-10 15:13:16	0000040f	Door [00-00-04-	-0F: Door 041 Trouble(Lock)				-		

9

ATRIUM Snelstartgids voor webserver V3.0

#	Gebruikersnaam	kaart of PIN nummer
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		
25		

ATRIUM Snelstartgids voor webserver V3.0

#	Gebruikersnaam	kaart of PIN nummer
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45		
40		
4/		
40		
77 F0		
50		

Reference : G0301CNL0413V04 Extranet : EXE-CDVI_IM ATRIUM WEB CMYK A4 NL 04

CDVI Benelux Otegemstraat 241 8550 Zwevegem (België) Tel.: +32 (0)56 73 93 00 Fax: +32 (0)56 73 93 05

Neem contact met ons op

.....

Bestellingen admin@cdvibenelux.com

Verkoop info@cdvibenelux.com

Technische dienst techsupport@cdvibenelux.com

Marketing marketing@cdvibenelux.com

> Boekhouding info@cdvibenelux.com

De keuze van de installateur cdvibenelux.com